Avocent®

The Power of Being There®

Quick Installation Guide

AutoView® Switch

For models: 1415, 1515 or 2015

The following instructions will help you set up the AutoView switching system. Should you require further assistance, please contact Avocent Technical Support.

To configure the AutoView switch

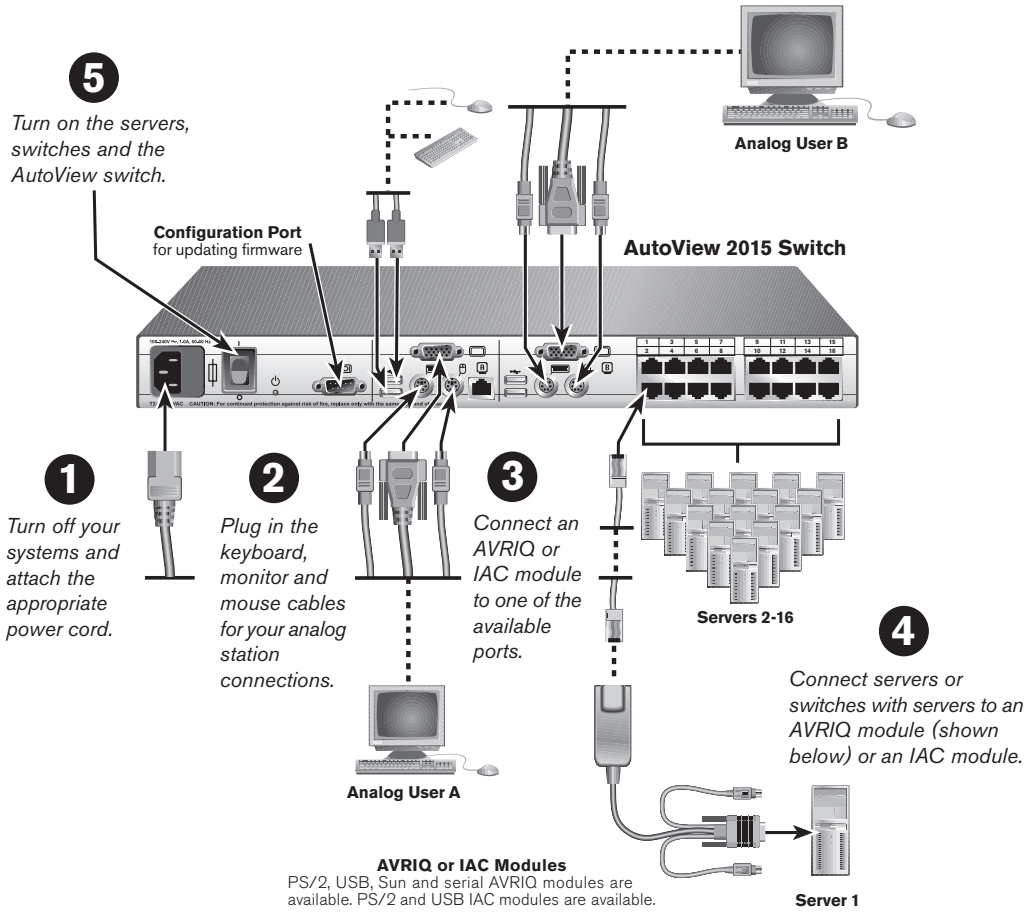
5
Turn on the servers, switches and the AutoView switch.
Analog User B
Configuration Port
for updating firmware
AutoView 2015 Switch
1
Turn off your systems and attach the appropriate power cord.
2
Plug in the keyboard, monitor and mouse cables for your analog station connections.
3
Connect an AVRIQ or IAC module to one of the available ports.
Servers 2-16
4
Connect servers or switches with servers to an AVRIQ module (shown below) or an IAC module.
Analog User A
AVRIQ or IAC Modules
PS/2, USB, Sun and serial AVRIQ modules are available. PS/2 and USB IAC modules are available.
Server 1

1 Connecting power to the switch

Turn off all servers that will be attached to your AutoView switch. Plug the supplied power cord into the AutoView switch power socket on the rear of the unit. Plug the other end into an appropriate AC power source.

2 Connecting the analog ports

Plug VGA monitor, keyboard and PS/2 or USB mouse cables into the analog user port sets A and/or B located on the rear of the switch.

3 Connecting modules to the switch

Choose an available port, labeled 1-8 or 1-16, on the rear of the AutoView switch. For an AVRIQ module, plug one end of a CAT 5 cable (up to 100 feet or 30 meters) into a numbered port and the other end into the RJ-45 connector on the AVRIQ module. For an IAC module, plug the CAT 5 connector into a numbered port.

4 Connecting servers to AVRIQ modules or IAC modules

Plug the AVRIQ or Integrated Access Cable (IAC) module keyboard, monitor and mouse connectors into the appropriate ports on the back of either a server or a compatible switch. Repeat this procedure for all servers that are to be connected to the AutoView switch.

NOTE: *Distances up to 100 feet (30 meters) are subject to cable quality and environmental factors.*

5 Turning on the servers and switches

While the components can be turned on in any order, turn on the servers first and then all other switches.

For additional information

For further information, please refer to the AutoView 1415/1515/2015 Installer/User Guide included with the switch. Check http://www.avocent.com for the latest software and firmware updates.

To Contact Avocent Technical Support **CALL (888) 793-8763** **VISIT www.avocent.com/support** **DOWNLOAD www.avocent.com**

Avocent, the Avocent logo, The Power of Being There and AutoView are registered trademarks of Avocent Corporation or its affiliates. All other marks are the property of their respective owners. ©2006 Avocent Corporation. All rights reserved.

590-643-501A